


Speaker re-assembly guide



Step 1

Remove the speaker from the top tray of the cart. Orient the speaker right side up and place it between the holes in the bracket. Secure it with the provided allen wrench and bolts.

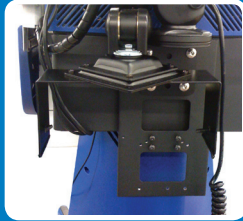

Step 2

Lift the double arm assembly with projector and document camera to the desired height. Using the allen wrench, tighten both bolts to secure. Adjust arms to the desired position.



Step 3

After assembly, the speaker should look like this. Make sure the audio wires are secure on the back of the speaker.

For customer service,
call 888.912.3151

HOWARDTM
TECHNOLOGY SOLUTIONS