



LED SECURITY MINI WALL PACK

**WARNING:** In Order to avoid the danger of electric shock, make certain that the power supply is disconnected before installing or performing maintenance.

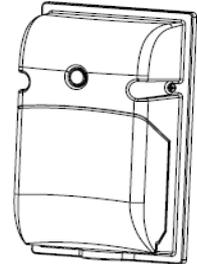

**MOUNTING**

1. Remove the front housing (#1) by removing the two screws (#2), securing it to the rear housing and set aside.

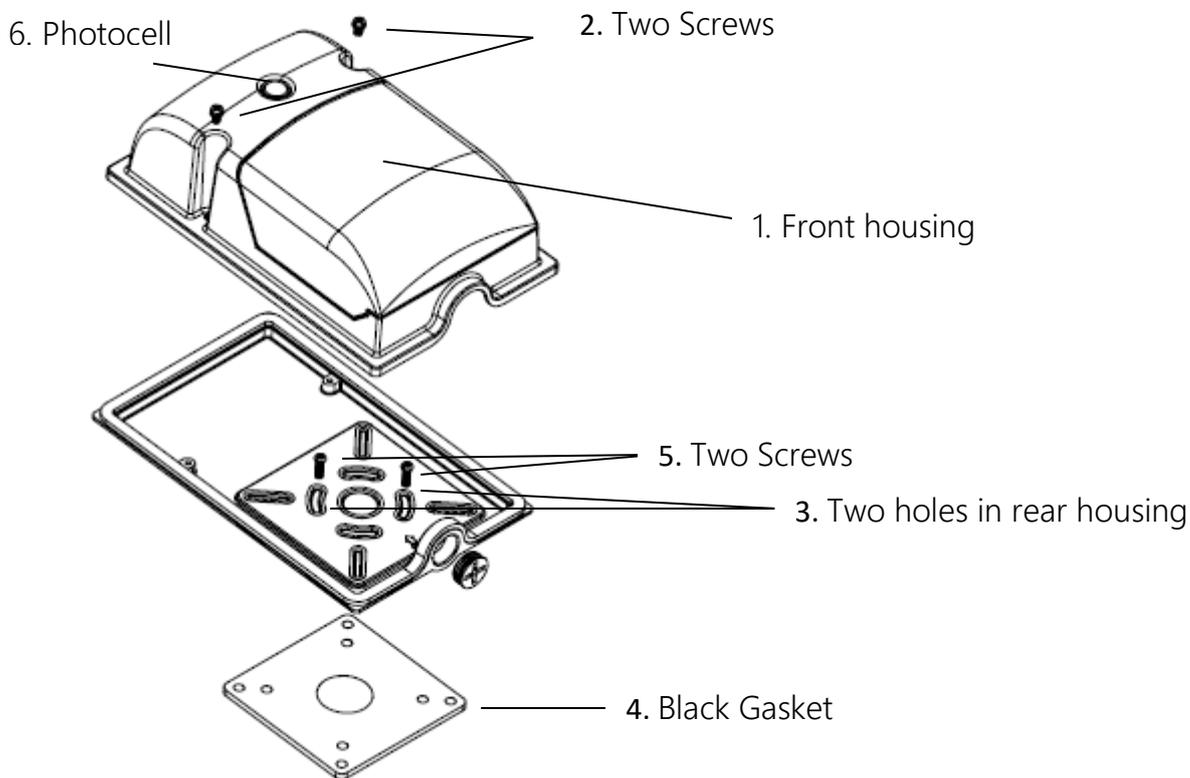

**POWER FROM CONDUIT**

1. Knock out two plugs (#3) in rear housing and apply the black gasket (#4) to the back surface of housing. Attach rear housing to mounting surface with two screws (#5).
  - For surface conduit: Remove the threaded plug from the bottom of the rear housing.
  - For conduit entry from back: Knock out the conduit entrance on back of fixture.
2. Complete the wiring to the power source and ground (refer to Electrical Connections).
3. To ensure rain tight seal, apply silicone caulking around back edges of fixture.
4. Reinstall front housing (#1) that was removed in Mounting Section.

**POWER FROM JUNCTION BOX**

1. Knock out appropriate holes around outlet hole in rear housing (#3) and apply the black gasket (#4) to the back surface of housing and fasten the rear housing to the junction box using the screws supplied with the junction box.
2. Complete the wiring to the power source and ground (refer to Electrical Connections).
3. To ensure rain tight seal, apply silicone caulking around back edges of fixture.
4. Reinstall front housing (#1) that was removed in Mounting Section.

This fixture is equipped with a photocell (#6) that turns the light off during the day. If you want to check the lamp during the day, just cover the sensor.

**ELECTRICAL CONNECTIONS:**

Fixture is equipped with universal volt driver 120-277V (ie. 120V, 208V, 240V or 277V)

PHASE TO NEUTRAL WIRING 120/277V

1. Connect supply ground to fixture ground (bare copper) lead.
2. Connect supply common to fixture neutral (white) lead.
3. Connect supply Vin to fixture hot (black) lead.

Tuck all wires carefully into wiring chamber ensuring that no wires are pinched.

PHASE TO PHASE WIRING 208/240V

1. Connect supply ground to fixture ground (bare copper) lead.
2. Connect supply L1 (Hot) to fixture neutral (white) lead.
3. Connect supply L2 (Hot) to fixture hot (black) lead.

Tuck all wires carefully into wiring chamber ensuring that no wires are pinched.

**FCC NOTICE CLASS A**

**CAUTION:** Changes or modifications not expressly approved could void your authority to use this equipment.

This fixture complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This fixture may not cause harmful interference, and (2) this fixture must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense. CAN ICES-005 (A)/NMB-005 (A)